LOAD BREAK SWITCH

GB Instruction sheet
F Notice d'utilisation
E Instrucciones de servicio

AUXILIARY CONTACT

R5 & T5 Series (16A - 40A, A-Frame)
R5 & T5 Series (60A - 80A, B-Frame) / R9 Series (30A - 100A, C-Frame)

Eaton Corporation
Electrical Sector
1111 Superior Ave.
Cleveland, OH 44114
877-ETN-CARE (877-386-2273)
United States
Eaton.com
© 2010 Eaton Corporation
All Rights Reserved

2 NO Max : 2 blocks
1 NO + 1 NC Max : 2 blocks

IS 537675
R5A3016U / R5A3025U
R5A3030U / R5A3040U
R5B3060U / R5B3080U
IS 537678
R9C3030U / R9C3060U
R9C3100U

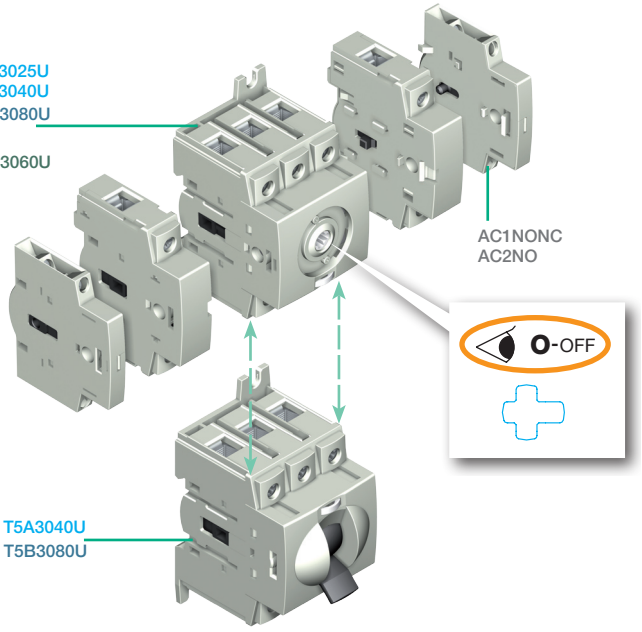

IS 537675
T5A3030U / T5A3040U
T5B3060U / T5B3080U

IEC – UL – CSA products

SWITCH	USED WITH	AUX. CONTACT
R5A3016U / R5A3025U R5A3030U / R5A3040U R5B3060U / R5B3080U R9C3030U / R9C3060U R9C3100U		AC1NONC AC2NO

Dual dimensions in/mm
Double dimensions in/mm
Doble dimensiones in/mm

Use copper conductors only, 75°C or higher.
1 x 0,22 mm²
22 -14 AWG
2 x 2,5 mm²
2x22 - 2x14 AWG
0.23 in / 6 mm Stripping distance.
Flat 5,5
pozidriv 1
7.1 lb-in (8.8 lb-in Max)
0.8 Nm (1 Nm Max)

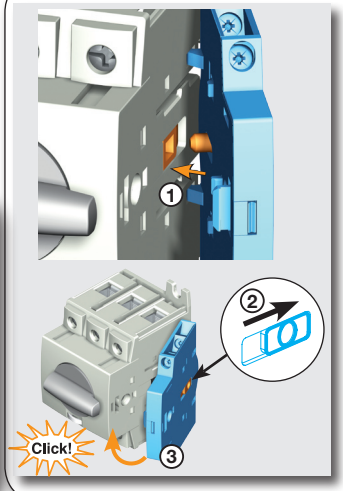

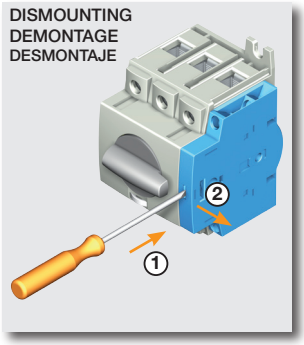

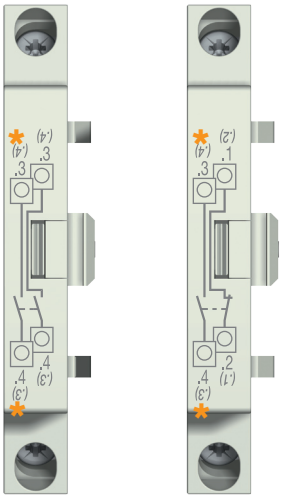

CONFIGURATION

Max : 2 blocks
: PRE-BREAK : NO PRE-BREAK

R5 & T5 Series (16A - 40A, A-Frame)
R5 & T5 Series (60A - 80A, B-Frame)

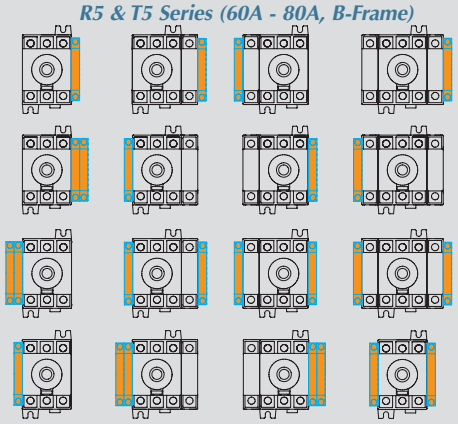

R9 Series (30A - 100A, C-Frame)

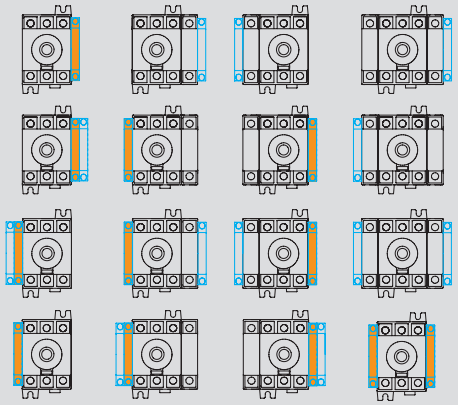

Size of end use enclosure : See Instruction Sheet of switches

DANGER / PELIGRO

HAZARDOUS VOLTAGE. This equipment must be installed and serviced only by qualified electrical personnel.Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off.Replace all devices, doors, and covers before turning on power tothis equipment. **Failure to follow these instructions will result in death or serious injury.**

TENSION DANGEREUSE. L'installation et l'entretien de cet appareil ne doivent être effectués que par du personnel qualifié.Coupez l'alimentation de cet appareil avant d'y travailler.Utilisez toujours un dispositif de détection de tension à valeur nominale approprié pour confirmer que toute alimentation est coupée.Replacez tous les dispositifs, les portes etles couvercles avant de mettre cet appareil sous tension.**Si ces précautions ne sont pas respectées, cela entraînera la mort ou des blessures graves.**

TENSION PELIGROSA. Solamente el personal de mantenimiento eléctrico especializado deberá instalar y prestar servicios de mantenimiento a este equipo.Desenergice el equipo antes de realizar cualquier trabajo en él.Siempre utilice un dispositivo detector de tensión adecuado para confirmar la desenergización del equipo.Vuelva a colocar todos los dispositivos,las puertas y las cubiertas antes de energizar este equipo.**El incumplimiento de estas precauciones podrá causar la muerte o lesiones serias.**

Edition 06/10 - **IS 537677-A** / S blanc offset quadri 80g/m²